


 

 

 

 


 










 

 

 

 

 


 


 

 

 

 
 

 






 

 

 

 
 










Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	VCR Eject		Shift + Exit
	DVD Open / Close		Eject
	DVD / VCR		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Return		Back
	Timer Rec		Shift + AV
	Input Select		AV

Originalfernbedienung Ersatzfernbedienung

	ShowView		Smart
	Cancel		Exit
	Title Menu / Top Menu		Menu
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / TRK +		Right
	Left / TRK -		Left
	Enter		Ok
	DVD Menu		D. Menu
	Setup		Options
	Stop		Stop
	Play		Play
	Pause / Still		Pause
	I<< Skip / Index -		I<<
	<< Rew / Search		<<



