






 

 






 





Originalfernbedienung Ersatzfernbedienung

	Power TV-SAT		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		Menu
	Guide		Guide
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

 









 












 


 






Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	Volume+ Tv		Vol +
	Volume- Tv		Vol -
	CH+ Tv Control		Ch +
	CH- Tv Control		Ch -
	TV/SAT		Media
	Front		Smart
	Power Front		Shift + Power
	Play Front		Play
	>> Front		>>
	<< Front		<<
	Pause Front		Pause
	Stop Front		Stop
	Enter Down		3D
	Input Select		AV
	1 Front		Shift + 1





Originalfernbedienung Ersatzfernbedienung

	2 Front	 + 	Shift + 2
	3 Front	 + 	Shift + 3
	4 Front	 + 	Shift + 4
	5 Front	 + 	Shift + 5
	6 Front	 + 	Shift + 6
	7 Front	 + 	Shift + 7
	8 Front	 + 	Shift + 8
	9 Front	 + 	Shift + 9
	0 Front	 + 	Shift + 0
	Channel+ Front	 + 	Shift + Ch +
	Channel- Front	 + 	Shift + Ch -








 





 


 
 

 





 








Originalfernbedienung Ersatzfernbedienung









 

 








 







 
 
 





**Originalfernbedienung Ersatzfernbedienung**

 Power DVD	 Power
 Master	 Vol +
 Master Volume-	 Vol -
 Mute	 Mute
 Menu	 Menu
 Top Menu	 Shift + Menu
 Subtitle	 Subt
 Audio	 Dual
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play	 Play
 <<	 <<
 >>	 >>
 I<<	 I<<

**Originalfernbedienung Ersatzfernbedienung**

 Pause	 Pause
 Stop	 Stop
 >>I	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ·/+10	 Pre Ch


 
 

 
 
 

 




 
 


 

 




**Originalfernbedienung Ersatzfernbedienung**

	Power FM-AM		Power
	Master		Vol +
	Master Volume-		Vol -
	Mute		Mute
	Display		Info
	T.Edit		Smart
	RF ATT		Media
	EON		List
	Tune+		Up
	Tune-		Down
	ST+		Right
	ST-		Left
	Enter		Ok
	D.Access		Blue
	MPX		Yellow
	Class		Green
	Search		TV/R

**Originalfernbedienung Ersatzfernbedienung**

	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



 
 




 
 


 







 
 
 




 
 



 




**Originalfernbedienung    Ersatzfernbedienung**

	Power Receiver		Power
	Signal Select		Smart
	Power DVR-VCR		Shift + Power
	DVD		Shift + 1
	TV/SAT		Shift + 5
	Front		Shift + 4
	Sleep		Sleep
	DVR/VCR		Shift + 2
	FM/AM		Shift + 3
	Dimmer		Media
	Auto		D. Menu
	Surround		Dual
	Advanced		Subt
	Sound Mode		Format
	Setup		Options
	Test Tone		Text
	CH. Select		3D

 


**Originalfernbedienung    Ersatzfernbedienung**

	Room Setup		Red
	Mute		Mute
	-		Green
	+		Yellow
	Enter (Up)		Shift + Pre Ch
	Master Volume-		Vol -
	Master		Vol +
	P+		Ch +
	Up/Tune+		Up
	Menu		Menu
	Left/ST-		Left
	Enter		Ok
	Right/ST+		Right
	P-		Ch -
	Down/Tune-		Down
	Guide		Guide
	<<		<<


 








Originalfernbedienung Ersatzfernbedienung

	Play		Play
	>>/A		>>
	I<</B		I<<
	Pause/C		Pause
	Stop/D		Stop
	>>/E		>>I
	1		1
	2		2
	3		3
	Enter Down		AV
	4		4
	5		5
	6		6
	·/±10		Pre Ch
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Channel+		Shift + Ch +
	Channel-		Shift + Ch -

