









 







Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Adv. Surr.		Sound / Title
	Audio		Audio / Lang I/II
	iPod CTRL		Eject / Surround
	A.ATT.		Picture / Format
	HMG		Zoom / Size
	Sleep		Sleep / Timer
	TV		TV/Radio /
	Top Menu		D.Menu / Top











 



 









 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	DVR / BDR		Setup / OPT /
	MCACC		Text / Goto
	↻ Input Select		AV / Input / RDS
	Home Menu		Menu / Home
	Up		Up
	D.Access		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	T.Edit		Exit / Cancel / Clear
	Down		Down
	Return		Back / Return
	Master Volume		Vol+
	Signal Sel		Smart / List
	CH Level		CH+ / Page+
	Master Volume		Vol-
	Disp		Display / Media

 







 














 




 







Originalfernbedienung Ersatzfernbedienung

	2nd Return		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Video		Guide / EPG / -/--
	0		0
	BD		Fav / Marker / PC
	Class		Red / Netflix / Search
	Repeat		Green / APP / Repeat
	Enter (Class)		Yellow / YouTube / Repeat
	Random		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

	Dimmer		Shift + Mute / Dimmer
	Tune-		Shift + << /
	Tune+		Shift + >> /
	Preset -		Shift + I<< / Preset-
	Preset +		Shift + >>I / Preset+
	Band		Shift + Sound / Title
	Stereo		Shift + Audio / Lang I/II
	Auto / Alc / Direct		Shift + Picture / Format
	ADPT		Shift + TV/Radio / Program
	MPX		Shift + D.Menu / Top Menu
	Status		Shift + Setup / OPT / Tools
	Phase CTRL		Shift + Text /
	Input Select ~		Shift + AV / Input / RDS
	Standard		Shift + Menu /
	2nd Up		Shift + Up
	2nd Left		Shift + Left
	2nd Enter		Shift + OK





