



 
 
 




















 







 

 







**Originalfernbedienung Ersatzfernbedienung**

	Power Receiver		Power
	Input Select		AV / Input / RDS
	DVD / LD		Shift + 2
	TV/SAT		Shift + 1
	TV/SAT		Shift + 0
	DVR/VCR		Shift + 4
	CD		Shift + 3
	CD-R/Tape		Shift + 5
	TUNER		Shift + 6
	Standard		Red / Netflix / Search
	Advanced		Green / APP / Repeat
	Stereo / Direct		Yellow / YouTube / Repeat
	Midnight /		Blue / Prime Video / Random
	CH. Select		Shift + OK
	Level -		Shift + Down
	Level +		Shift + Up
	Test Tone		Text / Goto

**Originalfernbedienung Ersatzfernbedienung**

	Mute		Mute / Dimmer
	Effect -		Shift + Left
	Effect +		Shift + Right
	FL Dimmer		Shift + Mute / Dimmer
	Master Volume-		Vol-
	Master		Vol+
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Audio		Audio / Lang I/II
	Down		Down
	Sleep		Sleep / Timer
	Guide		Shift + Guide / EPG / -/-
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	1		1
	2		2
	3		3
	Enter / Disc		Fav / Marker / PC
	4		4
	5		5
	6		6
	·/+10		Guide / EPG / -/-
	7		7
	8		8
	9		9





















 



 









Originalfernbedienung Ersatzfernbedienung

	0		0
	Channel+		CH+ / Page+
	Channel-		CH- / Page-
	Setup		Setup / OPT /


 




 







 

 

 

 
 




**Originalfernbedienung    Ersatzfernbedienung**

	Power Source		Power
	DVDLD		Shift + 2
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Audio		Audio / Lang I/II
	Down		Down
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+

 

 














 

 

 



 



 

 



**Originalfernbedienung    Ersatzfernbedienung**

	1		1
	2		2
	3		3
	Enter / Disc		Fav / Marker / PC
	4		4
	5		5
	6		6
	+10		Guide / EPG / -/-
	7		7
	8		8
	9		9
	0		0

 









 







**Originalfernbedienung Ersatzfernbedienung**

	Power Source		Power
	Tuner	 + 	Shift + 6
	Tune+		>> / Tune+
	Tune+		Up
	Menu		Menu / Home
	ST-		Left
	Enter		OK
	ST+		Right
	Tune-		<< / Tune-
	Tune-		Down
	Display		Display / Media
	Class		Pause / Step / Freeze
	MPX		Stop / Hold
	D.Access		>>I / Preset+
	1		1
	2		2
	3		3

**Originalfernbedienung Ersatzfernbedienung**

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

