



Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Input Select		AV
	DVD/LD		Shift + 1
	TV/SAT		Shift + 5
	DVR/VCR		Shift + 2
	CD		Shift + 4
	CD-R/Tape		Shift + 6
	TUNER		Shift + 3
	Standard		Red
	Advanced		Green
	Stereo		Yellow
	Midnight / Loudness		Blue
	CH. Select		Smart
	Level-		Ch -
	Level+		Ch +
	Test Tone		Media
	Effect -		Shift + Down

Originalfernbedienung Ersatzfernbedienung

	Effect +		Shift + Up
	FL Dimmer		D. Menu
	Mute		Mute
	Master Volume-		Vol -
	Master		Vol +
	Up/Tune+		Up
	Menu		Menu
	Left/ST-		Left
	Enter		Ok
	Right/ST+		Right
	Setup		Options
	Down/Tune-		Down
	Sleep		Sleep
	Guide		Guide
	<<		<<
	Play		Play
	>>/A		>>







Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	Pause		Pause
	Stop		Stop
	>>I		>>I
	1		1
	2		2
	3		3
	Enter		Info
	4		4
	5		5
	6		6
	·/+10		Pre Ch
	7		7
	8		8
	9		9
	0		0
	Channel+		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

	Channel-		Shift + Ch -



 
 
 



 
 
 






 

 








Originalfernbedienung Ersatzfernbedienung

	Power Source		Power
	DVD		Smart
	Top Menu		Ch +
	Up		Up
	Menu		Ch -
	Left		Left
	Enter		Ok
	Right		Right
	Audio		Dual
	Down		Down
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	Stop		Stop
	>>I		>>I

Originalfernbedienung Ersatzfernbedienung

 




 
 
 

 
	1		1
	2		2
	3		3
	Enter		Pre Ch
	4		4
	5		5
	6		6
	+10		Guide
	7		7
	8		8
	9		9
	0		0




Originalfernbedienung Ersatzfernbedienung

	Power Source		Power
	Tuner		Smart
	Tune+		Up
	Menu		Menu
	ST-		Left
	Enter		Ok
	ST+		Right
	Tune-		Down
	Band		Stop
	Display		Back
	Class		Pause
	MPX		I<<
	D.Access		>>I
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

