 

 



 

 

 


 
 
 
 

 

 

 













 





 

 







 

 


 
 

 

 

 







Originalfernbedienung Ersatzfernbedienung

	Power Receiver		Power
	Input Sel		AV / Input / RDS
	Standard		Sound / Title
	Stereo		Audio / Lang I/II
	ADV Surr.		Eject / Surround
	Master		Vol+
	Master Volume-		Vol-
	Enter		OK
	Remote Setup		Setup / OPT /
	Effect-		I<< / Preset-
	Effect+		>>I / Preset+
	Mute		Mute / Dimmer
	DVD		2
	VCR		4
	TUN		6
	Up/Tune+		Up
	Down/Tune-		Down

Originalfernbedienung Ersatzfernbedienung

	Loudness		Subtitle / EQ
	Test Tone		Text / Goto
	Left/ST-		Left
	Right/ST+		Right
	CH Select		Smart / List
	Midnight		Sleep / Timer
	ATT		D.Menu / Top
	Signal Select		Menu / Home
	CH Level+		CH+ / Page+
	CH Level-		CH- / Page-
	TV		1
	CD-R		3
	Power TV		Shift + Power
	1 Tv		Shift + 1
	2 Tv		Shift + 2
	3 Tv		Shift + 3
	4 Tv		Shift + 4





Originalfernbedienung Ersatzfernbedienung

	5 Tv		+	Shift + 5
	6 Tv		+	Shift + 6
	7 Tv		+	Shift + 7
	9 Tv		+	Shift + 9
	8 Tv		+	Shift + 8
	0 Tv		+	Shift + 0
	+10 Tv		+	Shift + Guide / EPG / -/-
	Menu Tv		+	Shift + Menu /
	Tv Input		+	Shift + AV / Input / RDS
	Tv Vol+		+	Shift + Vol+
	Tv Vol-		+	Shift + Vol-
	Channel + Tv		+	Shift + CH+ /
	Channel - Tv		+	Shift + CH- /
	Up Tv		+	Shift + Up
	Down Tv		+	Shift + Down
	Enter Tv		+	Shift + OK
	Right Tv		+	Shift + Right

Originalfernbedienung Ersatzfernbedienung



 









 
	Left Tv		+	Shift + Left
	Pause/T.Edit Tv		+	Shift + Pause / Step /
	Play/D.Access Tv		+	Shift + Play /
	Stop/MPX Tv		+	Shift + Stop /
	>>I/RF ATT Tv		+	Shift + >>I / Preset+
	I<</Display Tv		+	Shift + I<< / Preset-
	>>/Class Tv		+	Shift + >> /
	<</Band Tv		+	Shift + << /
	Rec Tv		+	Shift + Rec / Rec Mode
	Disc Tv		+	Shift + Fav / Marker / PC







Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Top Menu		D.Menu / Top
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6
	7 DVD		7
	8 DVD		8
	9 DVD		9
	0 DVD		0
	+10 DVD		Guide / EPG / -/-
	Disc DVD		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Menu DVD		Menu / Home
	Master		Vol+
	Master volume-		Vol-
	Mute		Mute / Dimmer
	Channel+ DVD		CH+ / Page+
	Channel- DVD		CH- / Page-
	Up DVD		Up
	Down DVD		Down
	Right DVD		Right
	Left DVD		Left
	Enter DVD		OK
	Pause DVD		Pause / Step / Freeze
	Rec DVD		Rec / Rec Mode
	Play DVD		Play / Slow
	<< DVD		<< / Tune-
	>> DVD		>> / Tune+
	Stop DVD		Stop / Hold





Originalfernbedienung Ersatzfernbedienung

	>>I DVD		>>I / Preset+
	I<< DVD		I<< / Preset-
	Power VCR		Shift + Power
	1 VCR		Shift + 1
	2 VCR		Shift + 2
	3 VCR		Shift + 3
	4 VCR		Shift + 4
	5 VCR		Shift + 5
	6 VCR		Shift + 6
	7 VCR		Shift + 7
	8 VCR		Shift + 8
	9 VCR		Shift + 9
	0 VCR		Shift + 0
	Disc VCR		Shift + Fav / Marker / PC
	Channel+ VCR		Shift + CH+ /
	Channel- VCR		Shift + CH- /
	Up VCR		Shift + Up

Originalfernbedienung Ersatzfernbedienung

 

 

 

 

 

 

 

 

 





 

 

 

 





	Down VCR		Shift + Down
	Right VCR		Shift + Right
	Left VCR		Shift + Left
	Enter VCR		Shift + OK
	Pause VCR		Shift + Pause / Step /
	Play VCR		Shift + Play /
	Stop VCR		Shift + Stop /
	<< VCR		Shift + << /
	>>I VCR		Shift + >>I / Preset+
	>> VCR		Shift + >> /
	I<< VCR		Shift + I<< / Preset-
	Rec VCR		Shift + Rec / Rec Mode







**Originalfernbedienung Ersatzfernbedienung**

	Power CD		Power
	1 CD		1
	2 CD		2
	3 CD		3
	4 CD		4
	5 CD		5
	6 CD		6
	7 CD		7
	8 CD		8
	9 CD		9
	0 CD		0
	+10 CD		Guide / EPG / -/--
	Disc CD		Fav / Marker / PC
	Master		Vol+
	Master Volume-		Vol-
	Mute		Mute / Dimmer
	Channel+ CD		CH+ / Page+

**Originalfernbedienung Ersatzfernbedienung**

	Channel- CD		CH- / Page-
	Up CD		Up
	Down CD		Down
	Right CD		Right
	Left CD		Left
	Enter CD		OK
	Pause CD		Pause / Step / Freeze
	Play CD		Play / Slow
	<< CD		<< / Tune-
	>> CD		>> / Tune+
	Stop CD		Stop / Hold
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Power TVC		Shift + Power
	1 TVC		Shift + 1
	2 TVC		Shift + 2
	3 TVC		Shift + 3

 

 

 

 

 

 

 

 

 





 

 

















**Originalfernbedienung    Ersatzfernbedienung**

	Power TUN		Power
	1 TUN		1
	2 TUN		2
	3 TUN		3
	4 TUN		4
	5 TUN		5
	6 TUN		6
	7 TUN		7
	8 TUN		8
	9 TUN		9
	0 TUN		0
	Master		Vol+
	Master volume-		Vol-
	Mute		Mute / Dimmer
	TUNE+ TUN		>> / Tune+
	TUNE- TUN		<< / Tune-
	ST+ TUN		>>I / Preset+

**Originalfernbedienung    Ersatzfernbedienung**

	ST- TUN		I<< / Preset-
	D.Access TUN		Play / Slow
	Band TUN		Pause / Step / Freeze
	Class TUN		Stop / Hold
	MPX TUN		Rec / Rec Mode
	Display TUN		Display / Media
	RF ATT TUN		Smart / List
	Power CDR		Shift + Power
	1 CDR		Shift + 1
	2 CDR		Shift + 2
	3 CDR		Shift + 3
	4 CDR		Shift + 4
	5 CDR		Shift + 5
	6 CDR		Shift + 6
	7 CDR		Shift + 7
	8 CDR		Shift + 8
	9 CDR		Shift + 9



