



Originalfernbedienung Ersatzfernbedienung

|   |              |   |                           |
|---|--------------|---|---------------------------|
|    | Standby / On |    | Power                     |
|    | BD           |    | Shift + 9                 |
|    | DVD          |    | Shift + 2                 |
|    | SAT          |    | Shift + Fav / Marker / PC |
|    | HDMI         |    | Shift + 0                 |
|    | iPod / USB   |    | Shift + 8                 |
|    | ADPT         |    | Shift + 4                 |
|    | MHL          |    | Shift + Guide / EPG / -/- |
|    | NETWORK      |    | Shift + 7                 |
|   | TUNER        |   | Shift + 6                 |
|  | TV           |  | Shift + 1                 |
|  | CD           |  | Shift + 3                 |
|  | INPUT PREV.  |  | CH- / Page-               |
|  | INPUT NEXT   |  | CH+ / Page+               |
|  | Volume+      |  | Vol+                      |
|  | Volume-      |  | Vol-                      |
|  | Status       |  | Shift + Info / Angle      |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                           |
|---|------------|---|---------------------------|
|    | Mute       |    | Mute / Dimmer             |
|    | Audio      |    | Audio / Lang I/II         |
|    | Top Menu   |    | D.Menu / Top              |
|    | Up         |    | Up                        |
|    | Tools Menu |    | Setup / OPT /             |
|    | Video P    |    | Picture / Format          |
|    | Left       |    | Left                      |
|    | Enter      |    | OK                        |
|    | Right      |    | Right                     |
|   | Home Menu  |   | Menu / Home               |
|  | Down       |  | Down                      |
|  | Return     |  | Back / Return             |
|  | Auto       |  | Red / Netflix / Search    |
|  | Surr       |  | Green / APP / Repeat      |
|  | Adv        |  | Yellow / YouTube / Repeat |
|  | CH LV      |  | Smart / List              |
|  | Pause      |  | Pause / Step / Freeze     |






 
 
 

 




 
















Originalfernbedienung Ersatzfernbedienung

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | MPX      |    | Text / Goto           |
|    | BAND     |    | TV/Radio /            |
|    | Play     |    | Play / Slow           |
|    | PTY      |    | Info / Angle          |
|    | Stop     |    | Stop / Hold           |
|    | Preset - |    | Shift + I<< / Preset- |
|    | I<<      |    | I<< / Preset-         |
|    | Preset+  |    | Shift + >>I / Preset+ |
|    | >>I      |    | >>I / Preset+         |
|    | Tune-    |    | Shift + << /          |
|   | <<       |   | << / Tune-            |
|  | Tune+    |  | Shift + >> /          |
|  | >>       |  | >> / Tune+            |
|  | 1        |  | 1                     |
|  | 2        |  | 2                     |
|  | 3        |  | 3                     |
|  | +Fav     |  | Fav / Marker / PC     |

Originalfernbedienung Ersatzfernbedienung

|   |          |   |                               |
|---|----------|---|-------------------------------|
|    | 4        |    | 4                             |
|    | 5        |    | 5                             |
|    | 6        |    | 6                             |
|    | DISP     |    | Display / Media               |
|    | 7        |    | 7                             |
|    | 8        |    | 8                             |
|    | 9        |    | 9                             |
|    | Repeat   |    | Shift + Green / APP /         |
|    | CH+      |    | Shift + CH+ /                 |
|    | D.Access |    | Exit / Cancel / Clear         |
|   | 0        |   | 0                             |
|  | Class    |  | Shift + Exit / Cancel / Clear |
|  | Shuffle  |  | Shift + Blue / Prime          |
|  | CH-      |  | Shift + CH- /                 |
|  | Dimmer   |  | Shift + Mute / Dimmer         |
|  | Sleep    |  | Sleep / Timer                 |

