



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Volume-		Vol-
	Volume+		Vol+
	Function		Menu / Home
	SFC Mode		Display / Media
	PGM Mode		Smart / List
	Scan		Back / Return
	Tuner Station-		CH- / Page-
	Tuner Station+		CH+ / Page+
	Stop Tape		OK
	Stop Tape I		Shift + OK
	< Tape		Left
	< Tape I		Shift + Left
	Tape >		Right
	> Tape I		Shift + Right
	Rec/Pause Tape		Rec / Rec Mode
	<< Tape		<< / Tune-

Originalfernbedienung Ersatzfernbedienung

	<< Tape I		Shift + << /
	>> Tape		>> / Tune+
	>> Tape I		Shift + >> /
	Disc CD		Blue / Prime Video / Random
	Play CD		Play / Slow
	Sleep		Sleep / Timer
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Snooze		Info / Angle
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold

