



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Sleep		Sleep / Timer
	Timer		Shift + Sleep / Timer
	Play CD		Play / Slow
	Pause CD		Pause / Step / Freeze
	-/I<< CD		I<< / Preset-
	>>I/+ CD		>>I / Preset+
	Stop CD		Stop / Hold
	Mode CD		Display / Media
	Enter CD		OK
	FM/AM		TV/Radio /
	Tuner -		CH- / Page-
	Tuner +		CH+ / Page+
	Play MD		Shift + Play /
	Pause MD		Shift + Pause / Step /
	-/I<< MD		Shift + I<< / Preset-
	>>I/+ MD		Shift + >>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	Stop MD		Shift + Stop /
	Mode MD		Shift + Display / Media
	Sound Scape		Shift + Sound / Title
	EQ Mode		Subtitle / EQ
	Vol+		Vol+
	Music Up		AV / Input / RDS
	Sound Scape		Sound / Title
	Vol-		Vol-

