







Originalfernbedienung Ersatzfernbedienung





	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	Play Mode		Shift + Play /
	Top Menu		D.Menu / Top
	Up		Up
	Menu		Menu / Home
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	Home Menu		Shift + Menu /
	Home Menu		Smart / List
	Return		Back / Return
	Enter		OK
	Stop		Stop / Hold
	<</< />		<< / Tune-
	Play		Play / Slow
	>/ />>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Open/Close		Eject / Surround





Originalfernbedienung	Ersatzfernbedienung		
	Zoom		Zoom / Size
	Display		Display / Media

Originalfernbedienung	Ersatzfernbedienung

