




























 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue / Prime Video / Random
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	Aspect		Eject / Surround
	Display		Display / Media
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	Up		Up
	Left		Left
	OK/CH List		OK
	Right		Right
	Down		Down
	Menu		Menu / Home





**Originalfernbedienung**

**Ersatzfernbedienung**

	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Text		Text / Goto
	PVR/Hold		Setup / OPT /
	Size		Zoom / Size
	FAV		Fav / Marker / PC
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop/Auto		Stop / Hold
	Reveal		D.Menu / Top
	Subtitle		Subtitle / EQ
	<</Nicam		<< / Tune-
	>>/Freeze		>> / Tune+
	<</Index		<< / Preset-

**Originalfernbedienung**

**Ersatzfernbedienung**

	>> /Subpage		>>  / Preset+

