








Originalfernbedienung Ersatzfernbedienung


 














	Power		Power
	S.Mode		Sound / Title
	MTS		Text / Goto
	P.Mode		Picture / Format
	Caption		Subtitle / EQ
	Sleep		Sleep / Timer
	P.Size		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	Jump		Smart / List
	.		Display / Media
	Mute		Mute / Dimmer
	Input		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Guide		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Down		Shift + Down
	Left		Left
	OK		OK
	Info		Info / Angle
	Menu		Menu / Home





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	List		Shift + Smart / List
	FAV CH		Fav / Marker / PC
	Timer		Shift + Sleep / Timer
	Freeze		Pause / Step / Freeze

