
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV/Radio		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Hold	 + 	Shift + Stop /
	Index		Info / Angle
	Subtitle		Subtitle / EQ
	Size		Zoom / Size
	Aspect	 + 	Shift + Picture / Format
	Subpage		Eject / Surround
	Media	 + 	Shift + Display / Media
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Auto		Smart / List
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Menu		Menu / Home
	Up		Up
	Audio		Audio / Lang I/II
	Left		Left
	OK		OK
	Right		Right
	Sleep		Sleep / Timer
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer



