
 



 

 









 

















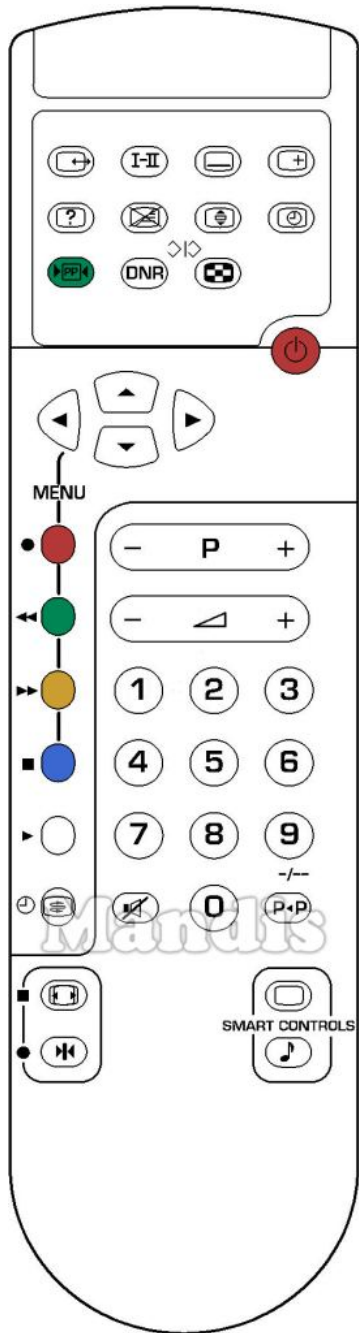

**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	><>		Shift + Menu
	Source		AV
	I - II		Dual
	Subtitles		Subt
	[ i+ ]		Info
	[ ? ]		D. Menu
	Mix		TV/R
	Zoom		Eject
	Time		Shift + AV
	[ PP ]		Back
	DNR		Options
	Mosaic		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left

**Originalfernbedienung Ersatzfernbedienung**

	Red / Menu		Red
	Red / Menu		Shift + Format
	Green / Menu		Green
	Green / Menu		Shift + Dual
	Yellow / Other		Yellow
	Yellow / Other		Menu
	Blue / OK		Blue
	Blue / OK		Ok
	Special Audio		Shift + Subt
	Text		Text
	P -		Ch -
	P +		Ch +
	Vol -		Vol -
	Vol +		Vol +
	1		1
	2		2
	3		3






Originalfernbedienung Ersatzfernbedienung

<b>4</b>	4	<b>4</b>	4
<b>5</b>	5	<b>5</b>	5
<b>6</b>	6	<b>6</b>	6
<b>7</b>	7	<b>7</b>	7
<b>8</b>	8	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
	Mute	<b>MUTE</b>	Mute
	P < P	<b>FAV PRE-CH</b>	Pre Ch
	Format	<b>PICTURE FORMAT</b>	Format
	Freeze	<b>II</b>	Pause
	Smart Controls Picture	<b>HOME SMART</b>	Smart
	Smart Controls Audio	<b>APP MEDIA</b>	Media

Originalfernbedienung Ersatzfernbedienung

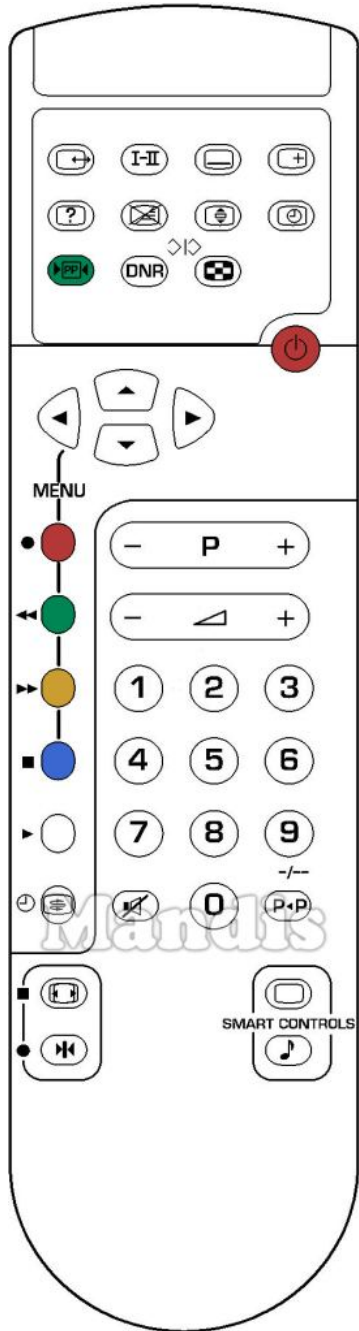


 





 






 
 


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Time		TV/R
	Zoom		3D
	Mix		Text
	[?]		Shift + Info
	[i+]		Info
	Freeze/Rec		Pause
	Format/Stop		Format
	Source		AV
	I-II		Dual
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Rec		Rec
	<<		<<
	>>		>>

**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	Play		Play
	Timer		Shift + AV
	P-		Ch -
	P +		Ch +
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-		Guide

