







 



 




 

 
 
 


 






 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DTV / ATV		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	P.Mode		Shift + Format
	S.Mode		Dual
	Aspect		Format

Originalfernbedienung Ersatzfernbedienung

	Still		Pause
	P -		Ch -
	P +		Ch +
	V -		Vol -
	V +		Vol +
	Sleep		Sleep
	Mute		Mute
	MTS		Shift + Media
	Menu		Menu
	Source		AV
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Exit		Exit
	i		Info





Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text / <<		Text
	Text / <<		<<
	Hold / >>		>>
	Hold / >>		Shift + Pause
	Mix / I<<		I<<
	Mix / I<<		Shift + Text
	Timer / >>I		>>I
	[≡] / Play/Pause		Play
	[≡] / Play/Pause		Shift + Info
	Size / Stop		Stop
	Size / Stop		Eject
	[?]		D. Menu
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	TV / Radio		TV/R
	List		List
	FAV		Pre Ch
	EPG		Guide
	Rec		Rec
	Rec Menu		Shift + Rec
	T.Shift		Shift + Smart
	USB		Media

