 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 


 






 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject/Auto		Eject
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

	Aspect		Format
	Audio		Dual
	CH+		Ch +
	CH-		Ch -
	Display		Info
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	LCD Menu		Menu
	DVD Setup/Exit		Exit
	DVD Setup/Exit		Options
	Input		AV
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual
	Sleep		Sleep



