
 

 


 
 




 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red/Title		Red
	Green/Goto		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	<</Index		<<
	>>/Hold		>>
	I<</Size		I<<
	>>I/Subpage		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	USB		Smart
	Subtitle		Subt
	TV/TXT		Text
	Cancel		Media

Originalfernbedienung Ersatzfernbedienung

	Reveal		Options
	Nicam/A2		Dual
	Tv/Radio		TV/R
	FAV		Pre Ch
	Nothing		3D
	Sleep		Sleep
	Disp		Info
	Input		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -



