






 



 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Shift + Pre Ch
	Recall		Pre Ch
	Game		Media
	Auto		Smart
	Info		Info



 



Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	EPG		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Zoom		Eject





Originalfernbedienung Ersatzfernbedienung

	Lan/Audio		Dual
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	Text		Text
	Tv/Radio		TV/R
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

