



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	SOURCE		AV
	ASPECT		Format
	MENU		Menu
	S.MODE		Shift + Dual
	P.MODE		Shift + Format
	1		1
	2		2
	3		3
	MUTE		Mute
	4		4
	5		5
	6		6
	DISPLAY		Info
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	TEXT		Text
	0		0
	RECALL		Back
	TV		TV/R
	∧		Up
	>		Right
	∨		Down
	<		Left
	MENU		Ok
	VOL+		Vol +
	VOL-		Vol -
	CH-		Ch -
	CH+		Ch +
	SLEEP		Sleep
	SUBCODE		Subt
	ZOOM		Eject
	STILL		Pause



