
 

 

 

 

 
 






Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Phono		1
	AUX 1		3
	Tape 1		4
	Tape 2		5
	Band		Smart
	A Tun		Ok
	< Tuning		Left
	Tuning >		Right
	Vol-		Vol -
	Vol+		Vol +
	On screen		Info
	CTR ECS		List
	< SRND Mode		Ch -
	SRND Mode >		Ch +
	BAL CHK		Dual
	< Delay Time		Down

Originalfernbedienung    Ersatzfernbedienung

	Delay Time >		Up
	<< Tape		<<
	>> Tape		>>
	Rec Tape		Rec
	Stop Tape		Stop
	Pause Tape		Pause
	Play Tape		Play

 

 
 
 
 
 

 



 

 

 
 
 

 

 

 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Phono		1
	AUX1		2
	AUX 2		3
	Tape 1		4
	Tape 2		5
	Video 1		6
	Video 2		7
	Video 3		8
	Off		Exit
	A Tun		Ok
	Tuning >		Right
	< Tuning		Left
	CTR ECS		List
	< SRND Mode		Ch -









 



 
 


 


 

 









Originalfernbedienung Ersatzfernbedienung

	SRND Mode >		Ch +
	BAL CHK		Dual
	Delay Time >		Up
	< Delay Time		Down
	Pause Tape		Pause
	Play Tape		Play
	Stop Tape		Stop
	>> Tape		>>
	Rec/Zone		Options
	<< Tape		<<
	Band		Smart
	Rec Tape		Rec
	On Screen		Info
	Tuner		Media











**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Band		Smart
	A Tun		Ok
	< Tuning		Left
	Tuning >		Right
	Vol-		Vol -
	Vol+		Vol +
	On Screen		Info
	CTR ECS		List
	< SRND Mode		Ch -
	SRND Mode >		Ch +
	BAL CHK		Dual
	< Delay Time		Down
	Delay Time >		Up
	<< Tape		<<
	>> Tape		Blue
	Rec Tape		Rec

**Originalfernbedienung Ersatzfernbedienung**

	Stop Tape		Stop
	Pause Tape		Pause
	Play Tape		Play

