

 









 















 



 








 



 










 



 
 








Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off	 + 	Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Ten/+10		Guide
	Memory		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol -
	Mute		Mute
	FRQ Direct		Play
	Tune		I<<
	Preset		>>I
	FM Mono		Pause
	Band		Stop
	Center		Yellow
	Swoofers		Red
	Surround		Green
	Menu		Menu
	Up		Up
	Down		Down
	+ / Forward		Right
	- / Back		Left
	Enter		Ok
	CD	 + 	Shift + 1





Originalfernbedienung Ersatzfernbedienung

	Tun	+	Shift + 2
	Tape	+	Shift + 3
	EXT	+	Shift + 4
	V1/DVD	+	Shift + 5
	V2	+	Shift + 6
	V3	+	Shift + 7
	V4	+	Shift + 8
	V5	+	Shift + 9
	EQ		Smart
	DYN		Media
	Rec		Rec
	Zone	+	Shift + Smart
	Sur+	+	Shift + Media
	2 CH		List
	PL C		Options
	PL M		3D
	5 CH		Dual



 








 













 





 
Originalfernbedienung Ersatzfernbedienung

	7 CH		Subt
	Display		Info
	Tape 2		Exit
	Phono		Back
	Tone		Text
	D-SLT		D. Menu
	Scan	+	Shift + Play
	PTY		<<
	P-Tun		>>
	TP	+	Shift + Pause
	TA	+	Shift + Stop
	Aspect		Format
	Disp	+	Shift + Info
	PIP		Sleep
	POP		TV/R
	Output		AV
	Power		Blue





Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Ten (+10)		Guide
	Clear (X)		Exit
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	I<<		I<<
	>>I		>>I
	Pause		Pause
	Stop		Stop
	Menu		Menu
	Up		Up
	OSD		Back
	Down		Down
	-/Back		Left
	-/Back		<<
	+/Forward		Right
	+/Forward		>>
	Enter		Ok
	Search-		Ch -
	Search+		Ch +
	Random (DYN)		TV/R





Originalfernbedienung Ersatzfernbedienung

	PAL (Rec)		Format
	HD Mode		3D
	DIM (SUR+)		AV
	Prog (2CH)		Sleep
	Screen (PL C)		Smart
	Title (PL M)		Media
	Prog-Scan		Options
	Open (7CH)		Eject
	Display		Info
	Audio		Dual
	Angle		List
	Subtitle		Subt
	Zoom		Shift + Eject
	Resume		Shift + Right
	Repeat		Text
	A-B		D. Menu
	Slow		Shift + Play



 























 



 

 
Originalfernbedienung Ersatzfernbedienung

	Goto		Shift + Left
	Power		Blue



















 

 

 



 
 
 
 

 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TEN (+10)		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Pause		Pause
	Stop		Stop
	Open (ENT)		Ok
	Open (ENT)		Eject
	Search-		Ch -
	Search+		Ch +
	Disc 1		Shift + 1
	Disc 2		Shift + 2
	Disc 3		Shift + 3
	Disc 4		Shift + 4
	Disc 5		Shift + 5
	Program (2CH)		Sleep
	Random (PL C)		TV/R
	Repeat (PL M)		Text
	Disc+ (7CH)		>>





Originalfernbedienung Ersatzfernbedienung

	Display (DISP)		Info
	Scan		Smart
	Time (PTY)		Pre Ch
	A-B (P-Tun)		D. Menu
	Review (TP)		Media
	Clear (TA)		Exit
	Power		Blue

Originalfernbedienung Ersatzfernbedienung

