


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	RGB / PC		Red
	VIDEO		Green
	DVD / HD		Yellow
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Contrast+		>>
	Contrast-		<<
	Bright+		>>
	Bright-		<<
	Color+		Ch +
	Color-		Ch -
	Tint+		Smart

**Originalfernbedienung Ersatzfernbedienung**

	Tint-		Media
	Sharpness+		1
	Sharpness-		4
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Wide		Format
	Display		Info
	Off Timer		AV
	Off Timer		Sleep

