












 





 


 
















Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	P+		CH+ / Page+
	Power 2		Shift + Power
	[ + ]		Display / Media
	PP		Back / Return
	[ ]		Info / Angle
	[ ]↔		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung    Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	- / ..		Guide / EPG / - / ..
	Contrast-		I << / Preset-
	Contrast+		>> I / Preset+
	Brightness-		Down
	Brightness+		Up
	Text		Text / Goto
	Text Subcode		Subtitle / EQ
	Text Hold		Shift + Stop /
	Text Size		Zoom / Size
	Text Reveal		Smart / List
	Text Index / Play		Play / Slow
	Text Mix		Shift + Text /
	Text Cancel		Exit / Cancel / Clear





Originalfernbedienung Ersatzfernbedienung

	Red / Rec		Red / Netflix / Search
	Red / Rec		Rec / Rec Mode
	Green / Stop		Green / APP / Repeat
	Green / Stop		Stop / Hold
	Yellow / <<		Yellow / YouTube / Repeat
	Yellow / <<		<< / Tune-
	Blue / >>		Blue / Prime Video / Random
	Blue / >>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung














 







 
















**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	P-		CH- / Page-
	P+		CH+ / Page+
	Power 2		Shift + Power
	[ + ]		Display / Media
	PP		Back / Return
	[ ]		Info / Angle
	[ ]↔		Picture / Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

**Originalfernbedienung    Ersatzfernbedienung**

	7		7
	8		8
	9		9
	0		0
	- / ..		Guide / EPG / - / ..
	Text		Text / Goto
	Text Subcode		Subtitle / EQ
	Text Hold		Shift + Stop /
	Text Size		Zoom / Size
	Text Reveal		Smart / List
	Play		Play / Slow
	Text Mix		Shift + Text /
	Text Cancel		Exit / Cancel / Clear
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+

