



























 







Originalfernbedienung Ersatzfernbedienung


	PP		Back / Return
	Mute		Mute / Dimmer
	(I)		OK
	Power		Power
	[ ]		Display / Media
	[=]		Text / Goto
	[↔]		AV / Input / RDS
	[ + ]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung







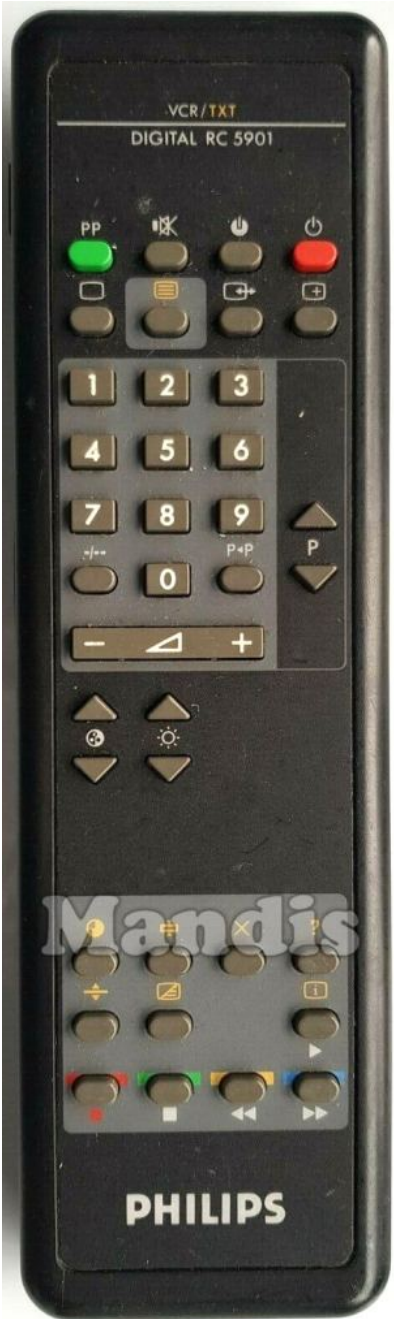



























	P+		CH+ / Page+
	-/--		Guide / EPG / -/--
	0		0
	P<P		Fav / Marker / PC
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	Colour+		Right
	Brighness-		Down
	Colour-		Left
	Brighness+		Up
	●		Setup / OPT /
	□		Stop / Hold
	X		Exit / Cancel / Clear
	[?]		D.Menu / Top
	◆		Zoom / Size
	[ / = ]		Sleep / Timer









































Originalfernbedienung    Ersatzfernbedienung

	PP		Back / Return
	Mute		Mute / Dimmer
	(I)		OK
	Power		Power
	[ ]		Display / Media
	[↔]		AV / Input / RDS
	[ + ]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P+		CH+ / Page+

Originalfernbedienung    Ersatzfernbedienung

	-/--		Guide / EPG / -/--
	0		0
	P<P		Fav / Marker / PC
	P-		CH- / Page-
	Vol-		Vol-
	Vol+		Vol+
	●		Setup / OPT /
	□		TV/Radio /
	X		Exit / Cancel / Clear
	?		D.Menu / Top
	Size		Zoom / Size
	[=]		Text / Goto
	[ /= ]		Sleep / Timer
	Play		Play / Slow
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-



