























 








 









Originalfernbedienung	Ersatzfernbedienung		
	Mute		Mute / Dimmer
	Power		Power
	Sleep		Sleep / Timer
	Vol+		Vol+
	EQ		Subtitle / EQ
	Timer		Shift + Sleep / Timer
	Vol-		Vol-
	Band		D.Menu / Top
	Prog/Mem		TV/Radio /
	Rand		Blue / Prime Video / Random
	Intro		OK
	Repeat		Green / APP / Repeat
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop		Stop / Hold

Originalfernbedienung	Ersatzfernbedienung		
	Album/Presets-		CH- / Page-
	Album/Presets+		CH+ / Page+
	ST/Mono/Find		Sound / Title

