



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Guide		Guide / EPG / -/-
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	Menu		Menu / Home
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	I<<		I<< / Preset-
	<<		<< / Tune-
	>>		>> / Tune+
	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Pause		Pause / Step / Freeze
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	List		Smart / List
	Media		Display / Media
	DVD		Shift + 2
	Radio		TV/Radio /
	Audio		Audio / Lang I/II
	[...]		Subtitle / EQ
	[≡]		Text / Goto
	[*]		Setup / OPT /

