

 


























 



 



 



















 













Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	Double Arrow		Smart / List
	Book		Display / Media
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Text		Text / Goto
	Blue / Aspect		Blue / Prime Video / Random
	Blue / Aspect		Shift + Blue / Prime
	Subtitle		Subtitle / EQ
	V +		Vol+
	i		Info / Angle
	P +		CH+ / Page+
	V -		Vol-
	P -		CH- / Page-

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Up		Up
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	X		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Audio		Audio / Lang I/II





Originalfernbedienung Ersatzfernbedienung

0	0	HDMI - BAT 0	0
MENU	Menu	HOME MENU	Menu / Home

Originalfernbedienung Ersatzfernbedienung

