





 





 

 











 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|--------|-------------------------------------------------------------------------------------|-------------------|
|  | Power |  | Power |
|  | Source |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | TV |  | TV/Radio / |
|  | 0 |  | 0 |
|  | Recall |  | Fav / Marker / PC |
|  | V+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | P+ |  | CH+ / Page+ |























 



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|----------------|---------------------------------------------------------------------------------------|-----------------------|
|  | V- |  | Vol- |
|  | World/Internet |  | Smart / List |
|  | P- |  | CH- / Page- |
|  | Menu |  | Menu / Home |
|  | Q.Menu |  | D.Menu / Top |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Exit |  | Exit / Cancel / Clear |
|  | i |  | Info / Angle |
|  | Music/Camera |  | Display / Media |
|  | TV Guide |  | Guide / EPG / -/- |
|  | */O |  | Shift + 1 |
|  | */Q |  | Shift + 2 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------|-----------------------------|
|  | [≡]/Text |  | Text / Goto |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | Lang |  | Audio / Lang I/II |
|  | [≡].. |  | Sound / Title |
|  | [-O-] |  | Setup / OPT / |
|  | << |  | << / Tune- |
|  | Pause |  | Pause / Step / Freeze |
|  | >> |  | >> / Tune+ |
|  | Rec |  | Rec / Rec Mode |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

