

 
 
 

 
 
 

 



 

 
 


 

 
 
 
 
 
 
 








 

 
 
 

 
 


 

 









 
 
 








Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Menu		Menu
	Exit		Exit
	Source		AV
	DTV		Smart
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Red/Program		Red
	Green/Nitro		Green
	Yellow/Repeat		Yellow
	>>/Size		>>
	<</Index		<<
	I<</Reveal		I<<
	>>I/SBPage		>>I
	Rec/Hold		Rec
	Subtitle		Subt
	Stop		Stop
	EPG		Guide
	Text		Text





Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Pause		Pause
	Tv/Radio		TV/R
	Info		Info
	Audio		Dual
	Recall		Pre Ch
	FAV		Shift + Pre Ch
	Subtitle Blue		Shift + Subt
	Aspect		Format
	Sleep		Sleep
	Auto		Options
	P.Mode		Shift + Format
	Nicam/A2		Shift + Options
	S.Mode		List
	DVD Setup		Media
	Title		Shift + Info
	Menu Blue		Shift + Menu

Originalfernbedienung Ersatzfernbedienung

	USB/CR		Shift + AV
	Eject		Eject
	Zoom		Shift + Eject
	Goto		Shift + Smart
	Angle		Shift + TV/R
	Display		D. Menu
	Blue/AB		Blue
	CH-		Ch -
	CH+		Ch +
	Vol+		Vol +
	Vol-		Vol -

