






 

 

 

 



 

 
 
 

 

 



 











 
 



 
 
 












 










Originalfernbedienung Ersatzfernbedienung



 








 
 
 






 



 

 
 



 


	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- / 10+		Guide
	Recall		Back
	Source		AV
	-[/]- / P.STD		Format

Originalfernbedienung Ersatzfernbedienung

	-[]- / S.STD		Shift + Dual
	Menu / ATV		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Program +		Ch +
	Program -		Ch -
	Info		Info
	Setup / DVD /		Smart
	I/II		Dual
	[/≡] / Text		Text
	Open / Close		Eject
	Play		Play





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	[≡x] / Exit		Exit
	[≡◆] / Title / EPG		D. Menu
	[≡+] / Menu / FAV		Pre Ch
	[≡i] / Goto / Tv/R		TV/R
	[≡?] / Slow Sub.		Options
	[≡o] / Repeat / Timer		3D
	[≡] / Subtitle		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

