 
 


 





 









 

 









 

 


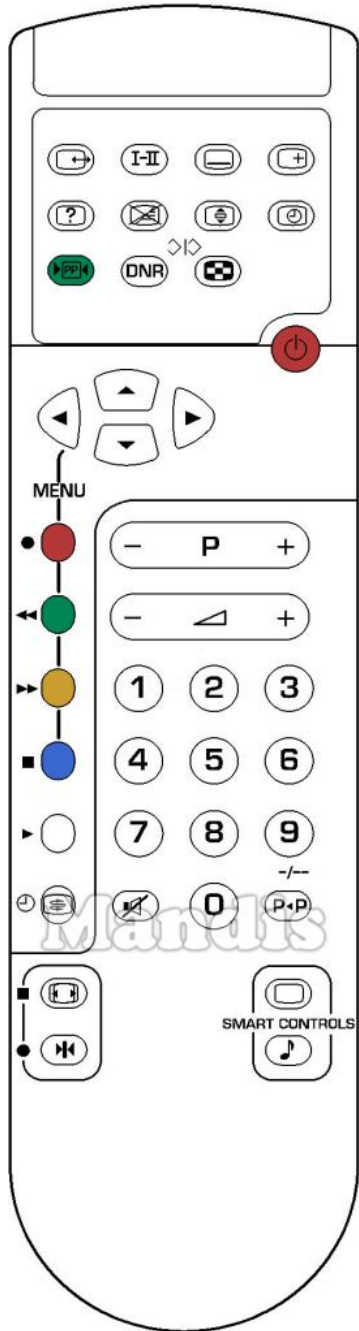 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|--------------|
|  | Power |  | Power |
|  | ><> |  | Shift + Menu |
|  | Source |  | AV |
|  | I - II |  | Dual |
|  | Subtitles |  | Subt |
|  | [i+] |  | Info |
|  | [?] |  | D. Menu |
|  | Mix |  | TV/R |
|  | Zoom |  | Eject |
|  | Time |  | Shift + AV |
|  | [PP] |  | Back |
|  | DNR |  | Options |
|  | Mosaic |  | Guide |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|----------------|
|  | Red / Menu |  | Red |
|  | Red / Menu |  | Shift + Format |
|  | Green / Menu |  | Green |
|  | Green / Menu |  | Shift + Dual |
|  | Yellow / Other |  | Yellow |
|  | Yellow / Other |  | Menu |
|  | Blue / OK |  | Blue |
|  | Blue / OK |  | Ok |
|  | Special Audio |  | Shift + Subt |
|  | Text |  | Text |
|  | P - |  | Ch - |
|  | P + |  | Ch + |
|  | Vol - |  | Vol - |
|  | Vol + |  | Vol + |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|------------------------|---------------------|-----------------------|---------------------|
| 4 | 4 | | |
| 5 | 5 | | |
| 6 | 6 | | |
| 7 | 7 | | |
| 8 | 8 | | |
| 9 | 9 | | |
| 0 | 0 | | |
| Mute | MUTE | | |
| P < P | PRE-CH | | |
| Format | PICTURE FORMAT | | |
| Freeze | Pause | | |
| Smart Controls Picture | SMART | | |
| Smart Controls Audio | APP MEDIA | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |




 








 


 
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|--------------|
|  | Power |  | Power |
|  | Time |  | TV/R |
|  | Zoom |  | 3D |
|  | Mix |  | Text |
|  | [?] |  | Shift + Info |
|  | [i+] |  | Info |
|  | Freeze/Rec |  | Pause |
|  | Format/Stop |  | Format |
|  | Source |  | AV |
|  | I-II |  | Dual |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | Rec |  | Rec |
|  | << |  | << |
|  | >> |  | >> |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|------------|
|  | Stop |  | Stop |
|  | Play |  | Play |
|  | Timer |  | Shift + AV |
|  | P- |  | Ch - |
|  | P + |  | Ch + |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/- |  | Guide |

