



















 
 




 
 

 













 
 



 





 



 

 

 
 
 


 



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	TV		TV/R
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	YouTube		Shift + Media
	Vol+		Vol +
	Vol-		Vol -

**Originalfernbedienung    Ersatzfernbedienung**

	Mute		Mute
	[i]		Info
	CH+		Ch +
	CH-		Ch -
	Netflix		Media
	Home		Smart
	*		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	EPG		Guide
	Zoom		Eject
	≡		Options





Originalfernbedienung   Ersatzfernbedienung

	Sleep		Sleep
	PRE-CH		Pre Ch
	FAV	+	Shift + Pre Ch
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Lang		Dual
	Subtitle		Subt
	Text		Text
	I<		I<<
	Stop		Stop
	Play		Play
	>I		>>I
	<<		<<
	Pause		Pause

Originalfernbedienung   Ersatzfernbedienung

	>>		>>

