
 
 


 




 
 




 

 
 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	I-II		Dual
	Sleep		Sleep
	FAV		Pre Ch
	Tv/Radio		TV/R
	Mute		Mute
	Picture		Format
	Sound		Shift + Dual
	Source		AV
	Info		Info
	Exit		Exit
	Menu		Menu
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ATV/DTV/+10		Guide
	Back/Subtitle		Back
	[/≡]/TTX		Text
	Open/Close		Eject
	[≡x]/Aspect/Cancel		Media



