 


 

 

 




 
 

 


 


 




 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	PR.List		List
	Source		AV
	CH+		Ch +
	CH-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Exit		Exit
	Sleep		Sleep
	Aspect		Format
	Rec		Rec
	Red/DVD-Setup		Red
	Green/Repeat		Green
	Yellow/Languag		Yellow
	Blue/DVD-Menu		Blue
	Title/PC Auto		Options



