 

 

 

 
 
 

 
 

 
 
 
 

 

 
 
 







 
 
 
 
 

 
 
 
 




 

 
 
 

 

 

 
 
 

 


 
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Marche / Veille		Power
	Arret Son		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Retour		Back
	EPG		Guide
	Audio		Dual
	S-Titres		Subt

Originalfernbedienung Ersatzfernbedienung

	TV / Radio		TV/R
	Menu		Menu
	Quitter		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Rec		Rec
	Stop		Stop
	Vol +		Vol +
	Vol -		Vol -
	TTX		Text
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	D.D		Smart





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 I<< Prev	 I<<		
 Play / Lecture	 Play		
 << REW	 <<		
 Enreg.	 +  Shift + Rec		
 >>I Next	 >>I		
 Pause	 Pause		
 >> FWD	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue / Timer	 Blue		
 Blue / Timer	 AV		

