



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	TV / Rad		TV/R
	Audio		Dual
	Text		Text
	App		Media
	List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu		Menu
	EPG		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Back		Back
	Exit		Exit
	Vol +		Vol +
	Vol -		Vol -
	i		Info
	Mute		Mute
	Prog +		Ch +
	Prog -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



