 



 

 



 



















 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV/Radio		TV/Radio /
	0		0
	Fav		Fav / Marker / PC
	Vol+		Vol+
	Reclist		Setup / OPT /
	Reclist		Shift + Smart / List

Originalfernbedienung Ersatzfernbedienung

	CH+		CH+ / Page+
	Vol-		Vol-
	Guide		Guide / EPG / -/--
	CH-		CH- / Page-
	Rec		Rec / Rec Mode
	MTS		Smart / List
	Aspect		Picture / Format
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Display		Display / Media
	Red		Red / Netflix / Search





**Originalfernbedienung   Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Cyan		Blue / Prime Video / Random
	<< / Index		<< / Tune-
	>> / TTX		Text / Goto
	>> / TTX		>> / Tune+
	<< / Sub.Pg		<< / Preset-
	>>  / Reveal		>>  / Preset+
	Stop / Hold		Stop / Hold
	Play/Pause /	+	Shift + Exit / Cancel / Clear
	Play/Pause /		Play / Slow
	Size		Zoom / Size
	Subtitle		Subtitle / EQ

**Originalfernbedienung   Ersatzfernbedienung**