 



 

 














 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause/Subpage		Pause / Step / Freeze
	Stop/Hold		Stop / Hold
	Rec		Rec / Rec Mode
	<</Index		<< / Tune-
	>>/Size		>> / Tune+
	I<</Mix		I<< / Preset-
	>>I/Timeshift		>>I / Preset+
	→IS ←		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	→IPI←		Picture / Format
	Sleep		Sleep / Timer
	TXT		Text / Goto
	Input		AV / Input / RDS
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Fav / Marker / PC
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	Disp		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5



