


 

 





 









 

 

 
 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Setup		Menu
	16:9		Format
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +

Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Audio		Dual
	Home		Smart
	Exit		Exit
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Yellow		Yellow
	Red		Red
	Blue		Blue
	Green		Green
	<<		<<
	>>		>>
	Play		Play



 




Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	Rec		Rec
	I<<		I<<
	>>I		>>I
	Repeat	 + 	Shift + Text
	BG-Music		Media
	Goto		TV/R
	Sub-T		Subt
	EPG		Guide
	TTX		Text
	Thumb		Back
	Zoom		Eject
	P/N		AV
	FAV		Pre Ch
	Nothing 1	 + 	Shift + Smart
	Nothing 2	 + 	Shift + Media

Originalfernbedienung Ersatzfernbedienung

	Nothing 3	 + 	Shift + Back

