













 



 

 

 



 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Goto		Shift + Text /
	0		0
	Select/BGM		D.Menu / Top
	Audio		Audio / Lang I/II
	TTX		Text / Goto
	Sub-T		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	EPG		Guide / EPG / -/-
	Vol+		Vol+
	Timer/Pag+		Sleep / Timer
	Timer/Pag+		CH+ / Page+
	FAV		Fav / Marker / PC
	Vol-		Vol-
	Timeshift/Pag-		CH- / Page-
	Setup		Setup / OPT /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Up/CH+		Up
	Left/Prev		Left
	Left/Prev		I<< / Preset-
	Pause		Pause / Step / Freeze
	Enter		OK



