


 




 
 
 




 
 
 

 
 

 
 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	Setup		Menu
	DIR		Media
	Edit		Exit
	Repeat		Text
	Subtitle		Subt
	Display		Info
	Video Out		AV
	Zoom		Eject
	Audio/Stream		Dual
	Digest/Photo		Format
	Mode/Photo		3D
	Home		Smart
	Up		Up
	Down		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	<< Skip		<<
	Skip >>		>>
	I<</Prev		I<<
	>>I/Next		>>I
	Play/Pause		Play
	Stop		Stop
	DVD/Play	 + 	Shift + Play
	I>/Slow		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	8		8
	9		9
	0		0
	+10		Guide
	Time Search		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Type/EQ		Ch +
	On/Off/EQ		Ch -
	Movie		Red
	Music		Green
	Photo		Yellow
	File		Blue

