

 







 






 

 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	PAL / HDMI	 + 	Shift + Display / Media
	Backlight On/Off	 + 	Shift + Power
	Mute		Mute / Dimmer
	Setup		Setup / OPT /
	Target		Smart / List
	Edit		Text / Goto
	Repeat		Green / APP / Repeat
	Subtitle		Subtitle / EQ
	Video Out	 + 	Shift + 4
	Display		Display / Media
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II
	Photo Digest		D.Menu / Top
	Photo Mode	 + 	Shift + Picture / Format
	Home		Menu / Home
	Slide Time	 + 	Shift + Setup / OPT / Tools























 




 






Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Rotate	 + 	Shift + Text /
	Left		Left
	Enter		OK
	Right		Right
	CH Sub-Audio	 + 	Shift + Subtitle / EQ
	Down		Down
	Info		Info / Angle
	<< Skip		<< / Tune-
	>> Skip		>> / Tune+
	I<< Prev		I<< / Preset-
	>>I Next		>>I / Preset+
	Source		AV / Input / RDS
	4:3 / 16:9	 + 	Shift + Zoom /
	Play / Pause		Play / Slow
	Play / Pause	 + 	Shift + Play /
	Stop		Stop / Hold











Originalfernbedienung Ersatzfernbedienung

	1		1
	2		2
	3		3
	+10		Guide / EPG / /--
	4		4
	5		5
	6		6
	0		0
	7		7
	8		8
	9		9
	Time Search		Sleep / Timer
	EQ On/Off		Shift + Mute / Dimmer
	EQ Type		Shift + Green / APP /
	Vol -		Vol-
	Vol +		Vol+
	Movie		Red / Netflix / Search

Originalfernbedienung Ersatzfernbedienung

	Music		Yellow / YouTube / Repeat
	Photo		Picture / Format
	File		Shift + Smart / List

