







 

 

 

 



 




 


 



 







 
 

 




 
 

 

 



 
 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Hand		D.Menu / Top
	Videos		4
	Pictures		Picture / Format
	Songs		Sound / Title
	Folders		AV / Input / RDS
	<<		<< / Tune-
	Up		Up
	>>		>> / Tune+
	Left		Left
	Play/Pause / Enter		Play / Slow
	Play/Pause / Enter		Shift + Play /
	Play/Pause / Enter		Pause / Step / Freeze
	Right		Right
	Back		Back / Return
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Home		Shift + Menu /
	Home		Menu / Home
	Vol-		Vol-
	Vol+		Vol+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Subtitle		Subtitle / EQ
	Tools		Setup / OPT /
	Audio		Audio / Lang I/II
	Zoom / Display		Zoom / Size
	Zoom / Display		Shift + Zoom /
	:: →[>]		Smart / List
	Repeat		Green / APP / Repeat
	[[]]		Display / Media
	LED		Text / Goto
	Exit		Exit / Cancel / Clear

