



Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|------------------|
|  | Power |  | Power |
|  | File Mode |  | D.Menu / Top |
|  | Setup |  | Setup / OPT / |
|  | Suspend |  | AV / Input / RDS |
|  | Page Up |  | CH+ / Page+ |
|  | USB |  | Shift + 8 |
|  | TV Mode |  | TV/Radio / |
|  | Mute |  | Mute / Dimmer |
|  | Page Down |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|-----------|---------------------------------------------------------------------------------------|-------------------|
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Delete |  | Guide / EPG / -/- |
|  | CAPS/NUM. |  | Fav / Marker / PC |
|  | Return |  | Back / Return |
|  | Source |  | Eject / Surround |
|  | Info |  | Info / Angle |
|  | Home |  | Shift + Menu / |
|  | Up |  | Up |
|  | Down |  | Down |
|  | Left |  | Left |
|  | Right |  | Right |
|  | Enter |  | OK |
|  | Menu |  | Menu / Home |
|  | I<< |  | I<< / Preset- |
|  | Play |  | Play / Slow |
|  | >>I |  | >>I / Preset+ |



