


 

 


 


 



 




 










 



 



 

 
 
 


 



 

 

 
 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		4
	VIDEO 1		1
	VIDEO 2		2
	TUNER		6
	AUX		3
	TAPE		5
	Memory		Sleep
	PTY Search		TV/R
	Tuning+		Right
	Tuning-		Left
	Band		Smart
	Preset+		Up
	Preset-		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	CH Select		List
	SUBWOOFER		Info
	Bass		Green
	LFE. Trim		Yellow
	Treble		Red
	Delay Time		Blue
	Test Tone		Text
	Surround Mode		Dual
	Stereo		Ch +
	Dynamic		Ch -
	DTS / Dolby		Menu
	Dolby PL. II		D. Menu

