





 

 

 

 

 

 

 

 

 

 

 

 













 
 



 



 


 


 

 

 

 

 
 




Originalfernbedienung Ersatzfernbedienung

|   |        |   |                   |
|---|--------|---|-------------------|
|    | Power  |    | Power             |
|    | Source |    | AV / Input / RDS  |
|    | 1      |    | 1                 |
|    | 2      |    | 2                 |
|    | 3      |    | 3                 |
|    | 4      |    | 4                 |
|    | 5      |    | 5                 |
|    | 6      |    | 6                 |
|    | 7      |    | 7                 |
|    | 8      |    | 8                 |
|    | 9      |    | 9                 |
|  | Lang   |  | Audio / Lang I/II |
|  | 0      |  | 0                 |
|  | TXT    |  | Text / Goto       |
|  | Vol+   |  | Vol+              |
|  | Mute   |  | Mute / Dimmer     |
|  | P+     |  | CH+ / Page+       |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |                            |
|---|-------------|---|----------------------------|
|    | Vol-        |    | Vol-                       |
|    | Home        |    | Menu / Home                |
|    | P-          |    | CH- / Page-                |
|    | Netflix     |    | Shift + Red / Netflix /    |
|    | YouTube     |    | Shift + Yellow / YouTube / |
|    | Guide       |    | Guide / EPG / -/-          |
|    | Up          |    | Up                         |
|    | i           |    | Info / Angle               |
|    | Left        |    | Left                       |
|    | OK          |    | OK                         |
|    | Right       |    | Right                      |
|  | Down        |  | Down                       |
|  | Back        |  | Back / Return              |
|  | Exit        |  | Exit / Cancel / Clear      |
|  | *1          |  | Smart / List               |
|  | prime video |  | Shift + Blue / Prime       |
|  | Red         |  | Red / Netflix / Search     |



