 



 





 

 



 



 

 

 





 

 













 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	D.Setup/Index		D.Menu / Top
	Mute		Mute / Dimmer
	Play/Hold		Play / Slow
	Pause/Hold		Pause / Step / Freeze
	Stop/Mix		Stop / Hold
	<</Cancel		<< / Tune-
	>>/Size		>> / Tune+
	I<</Reveal		I<< / Preset-
	>>I/Subpage		>>I / Preset+
	S.Mode		Sound / Title
	Subtitle		Subtitle / EQ
	P.Mode		Picture / Format
	Sleep		Sleep / Timer
	Nicam/Audio		Setup / OPT /
	D.Menu/Text		Text / Goto
	Input		AV / Input / RDS

Originalfernbedienung Ersatzfernbedienung

	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Ok		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Vol+		Vol+
	Eject/Auto		Smart / List
	Ch+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	Ch-		CH- / Page-
	1		1
	2		2
	3		3



