





 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 

 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|------------------|
|  | Power |  | Power |
|  | 123 / keypad |  | Eject / Surround |
|  | Extra |  | D.Menu / Top |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Return |  | Back / Return |
|  | Vol Up |  | Vol+ |
|  | Home / Hub |  | Smart / List |
|  | CH Up |  | CH+ / Page+ |
|  | Vol Down |  | Vol- |
|  | CH Down |  | CH- / Page- |
|  | Play / Pause |  | Shift + Play / |
|  | Mute |  | Mute / Dimmer |
|  | Play |  | Play / Slow |



















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Rec |  | Rec / Rec Mode |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | S.Mode |  | Sound / Title |
|  | AD |  | Audio / Lang I/II |
|  | AD / Subt. |  | Subtitle / EQ |
|  | Picture |  | Picture / Format |
|  | P.Size |  | Zoom / Size |
|  | Sleep |  | Sleep / Timer |
|  | Auto Prog |  | TV/Radio / |
|  | Tools |  | Setup / OPT / |
|  | TTX/MIX |  | Text / Goto |
|  | Source |  | AV / Input / RDS |























 







Originalfernbedienung Ersatzfernbedienung

| | | |
|---------|---|-----------------------------------|
| Menu |  | Menu / Home |
| Info |  | Info / Angle |
| Exit |  | Exit / Cancel / Clear |
| CH List |  | Display / Media |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| Guide |  | Guide / EPG / -/-- |
| 0 |  | 0 |
| Fav CH |  | Fav / Marker / PC |
| Search |  +  | Shift + Yellow / YouTube / Repeat |

Originalfernbedienung Ersatzfernbedienung

| | | |
|-------------|---|-----------------------------|
| Prime Video |  +  | Shift + Blue / Prime |
| Rakuten Tv |  +  | Shift + Green / APP / |
| Netflix |  +  | Shift + Red / Netflix / |
| Still |  +  | Shift + Pause / Step / |
| Dual I-II |  +  | Shift + Audio / Lang I/II |
| Add / Del |  +  | Shift + Eject / Surround |
| TV / DTV |  +  | Shift + TV/Radio / Program |
| E-Manual |  +  | Shift + OK |
| Media P. |  +  | Shift + Display / Media |
| -/-- |  +  | Shift + Guide / EPG / -/-- |
| PRE-CH |  +  | Shift + Fav / Marker / PC |
| Red |  | Red / Netflix / Search |
| Yellow |  | Yellow / YouTube / Repeat |
| Blue |  | Blue / Prime Video / Random |
| Green |  | Green / APP / Repeat |

