




 













 

 
















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4/<< Shuttle		4
	5		5
	6/Shuttle >>		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Tv/VCR		TV/R
	DVD		Media
	VCR		Smart
	Input Sel		AV

Originalfernbedienung Ersatzfernbedienung

	Audio		Dual
	TRK Up		Vol +
	TRK Down		Vol -
	Prog Up		Ch +
	Prog Down		Ch -
	F.ADV/Step		Yellow
	I<<		I<<
	<<		<<
	Stop		Stop
	Play		Play
	Pause		Pause
	>>I		>>I
	>>		>>
	Menu		Menu
	Subtitle		Subt
	Info		Info
	Return		Back



