









 

 

 



 





 



 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		SRC
	HDMI		MEDIA
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		TEXT
	PRE-CH		P/C / FAV
	Mute		MUTE
	CH List		TV/R

Originalfernbedienung Ersatzfernbedienung

	Smart Hub		VOD
	Vol+		VOL +
	Vol-		VOL -
	P+		CH +
	P-		CH -
	Guide		-/-- / EPG
	Menu		MENU
	Tools		OPT+
	Info		INFO
	Up		UP
	Enter		OK
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Return		BACK
	Exit		EXIT
	Red		Red (A)



